






TC24064C-NHD CONTROLLER

USER MANUAL

Revised February 2020

www.tvielectronics.com

 2211 Rayford Rd., Ste. 111-332 • Spring, TX 77386  281-408-4051  281-408-4052

THIS PAGE INTENTIONALLY LEFT BLANK

IMPORTANT NOTICE

TVI Electronics shall not be liable in any action against it in any way related to the products or software for any loss or damages, whether non-specified direct, indirect, special, incidental or consequential (including downtime, loss of profits or goodwill) regardless of the legal theory asserted.

TVI Electronics reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products sold by TVI Electronics are subject to company's terms and conditions of sale supplied at the time of order acknowledgment.

User is responsible for determining whether the TVI Electronics products and software are fit for User's particular purpose and suitable for its method of production, including intellectual property liability for User's application.

WARRANTY

TVI Electronics warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TVI Electronics' standard warranty.

All TVI Electronics products have been manufactured to your company's or your own specifications as a part for use in your company's or own general electronic products. It is guaranteed to perform according to delivery specifications.

This evaluation board being sold by TVI Electronics is intended for use for ENGINEERING DEVELOPMENT OR EVALUATION PURPOSES ONLY. We cannot take responsibility if the product is used in medical devices, nuclear power control equipment, aerospace equipment, fire and security systems, or any other applications in which there is a direct risk to human life and where extremely high levels of reliability are required.

1. We cannot accept responsibility for any defect, which may arise from additional manufacturing of the product (including disassembly and reassembly), after product delivery.
2. We cannot accept responsibility for any defect, which may arise after the application of strong external force to the product.
3. We cannot accept responsibility for any defect, which may arise due to the application of static electricity after the product has passed your company's acceptance inspection procedures.

Customers are responsible for their products and applications using TVI Electronics components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TOUCH SCREEN LCD MODULE HANDLING PRECAUTIONS

The following precautions will guide you in handling of our product correctly:

1. Liquid crystal display devices:
 - 1.1. The liquid crystal display device panel used in the liquid crystal display module is made of plate glass. Avoid any strong mechanical shock on LCD and touch screen. Should the glass break, handle it with care.
 - 1.2. The polarizer adhering to the surface of the LCD is made of a soft material. Guard against scratching it.
 - 1.3. Wash your hands or clothes if you touch liquid crystal!
2. Avoid Static electricity!
 - 2.1. When working with the module, use your naked or gloved hand and wear non-conductive work suit to prevent generating static electricity by friction. ESD ground straps should be utilized.
 - 2.2. Be sure to ground any electrical appliances you may be using, such as soldering iron, cutting pliers, tweezers, etc.
 - 2.3. Floors, doors, and work tables must be grounded to discharge electricity.
3. When the LCD module alone must be stored for long periods of time:
 - 3.1. Protect the modules from high temperature and humidity.
 - 3.2. Keep the modules out of direct sunlight or direct exposure to ultraviolet rays.
 - 3.3. Protect the modules from excessive external forces.
4. Use the module with a power supply that is equipped with an over current protector circuit, since the module is not provided with this protective feature.
5. Do not ingest the LCD fluid itself should it leak out of a damaged LCD module. Should hands or clothing come in contact with LCD fluid, wash immediately with soap.
6. Conductivity is not guaranteed for models that use metal holders where solder connections between the metal holder and the PCB are not used.
7. Do not stack up modules since they can be damaged by components on neighboring modules.
8. Do not place heavy objects on top of the product. This could cause glass breakage.
9. Do not scratch LCD or touch screen!
10. In order to maintain module reliability, do not touch or hold by the connector area.
11. Avoid any bending, pulling, or other excessive force on flexible cables, which can result in broken connections.



PREFACE

About This Manual

This user's manual describes the function and operation of the TC24064C-NHD controller Firmware rev 1.0 and higher. This manual will help you quickly set up the touch screen controller evaluation board and its accompanying software, so that you can rapidly test and evaluate their usefulness for your application.

If You Need an Assistance

If you have any questions about this evaluation board, feel free to e-mail TVI Electronics Support Team at support@tvielectronics.com. Include the product name in the subject heading.

Copyright

Copyright © 2020, TVI Electronics, LLC. All rights reserved. TVI Electronics reserves the right to make changes and improvements to its product without notification.

Trademarks

Windows is a registered trademark of Microsoft Corporation.
NewHaven Display is a registered trademark of NewHaven Display, Inc.

Notice to Users

When a system failure may cause serious consequences, protecting life and property against such consequences with a backup system or safety device is essential. The user agrees that protection against consequences resulting from system failure is the user's responsibility. This device is not approved for life-support or medical systems.

DOCUMENT CONVENTIONS

The following icons are used as necessary to distinguish elements of text.



NOTE. Notes emphasize additional information that may be useful to the reader.



CAUTION. Describes a situation or practice that requires operator awareness or action in order to avoid undesirable consequences.



MANDATORY ACTION. Gives directions that, if not observed, could result in loss of data or in damage to equipment.

CONTENTS

1. FUNCTIONS AND STRUCTURE.....	1
1.1. GENERAL.....	1
1.2. FEATURES.....	1
1.2.1. RS-232 communication interface with nine programmable baud rates	1
1.2.2. USB communication interface	1
1.2.3. 4Mb flash memory.....	1
1.2.4. Touch screen controller.....	1
1.2.5. AVRISP interface	1
1.2.6. Draw/Clear Line/Rectangle/Circle	2
1.2.7. Voltage regulator.....	2
1.2.8. Multiple display modes.....	2
1.2.9. Software control	2
1.2.10. Hardware contrast adjustment.....	2
1.2.11. Buzzer.....	2
1.2.12. Animation.....	2
1.2.13. Fonts.....	2
1.2.14. Firmware update.....	2
1.3. POWER REQUIREMENTS	2
2. GETTING STARTED	4
2.1. HARDWARE CONNECTION.....	4
2.2. POWER-UP.....	5
2.3. QUICK START	5
3. OPERATION	6
3.1. TC24064C-NHD CONTROLLER CONNECTION	6
3.1.1. Jumpers Settings	8
3.1.2. Serial Communication	9
3.1.3. USB Communication	9
3.1.4. Baud Rate Settings.....	9
3.1.5. Contrast Regulation	9
3.1.6. Firmware Update	9
3.2. TC24064C-NHD COMMANDS LIST	10
4. PHYSICAL DESCRIPTION	19
4.1. TC24064C-NHD CONTROLLER BOARD PHYSICAL DIMENSIONS.....	19

FIGURES

<i>Figure 2-1: LCD Backlight Cable Routing</i>	4
<i>Figure 2-2: Hardware Connection</i>	4
<i>Figure 2-3: Default Software Screen</i>	5
<i>Figure 3-1: TC24064C-NHD Controller Board Layout</i>	6
<i>Figure 3-2: J5 Jumpers</i>	6
<i>Figure 3-3: J8 Jumpers</i>	6
<i>Figure 3-4: J13 Pin Out</i>	6
<i>Figure 3-5: J13A Pin Out</i>	6
<i>Figure 3-6: J9 Pin Out</i>	6
<i>Figure 3-7: J12 Pin Out</i>	7
<i>Figure 3-8: J10 Pin Out</i>	7
<i>Figure 3-9: J7 Pin Out</i>	7
<i>Figure 3-10: PC to TC24064C-NHD Controller Connection</i>	9

TABLES

<i>Table 3-1: J5 Jumper Descriptions</i>	7
<i>Table 3-2: J8 Jumper Descriptions</i>	7
<i>Table 3-3: Headers</i>	7
<i>Table 3-4: Connectors</i>	7
<i>Table 3-5: Switches</i>	7
<i>Table 3-6: J7 Pin Descriptions</i>	8
<i>Table 3-7: J13A Pin Descriptions</i>	8
<i>Table 3-8: J13, J9 Pin Descriptions</i>	8
<i>Table 3-9: J12 Pin Descriptions</i>	8

EXAMPLES

<i>Example 2-1: Default Power-Up Screen</i>	<i>5</i>
<i>Example 3-1: 6x3 Keypad Configuration</i>	<i>14</i>

1. FUNCTIONS AND STRUCTURE

1.1. GENERAL

The TC24064C-NHD is an intelligent LCD controller with an integrated touch screen control that supports NewHaven Display NHD-C24064WO-ATFH#-3V3 240x64 COG Monochrome FSTN Graphic LCDs. This controller allows user individually control each display pixel. This independent pixel control allows user displaying both text and pictures simultaneously. The TC24064C-NHD uses an ATMEGA32 microcontroller and 4M bit AT45DB041B Flash. The microcontroller can be reprogrammed at any time by using AVRISP device.

1.2. FEATURES

1.2.1. *RS-232 communication interface with nine programmable baud rates*

The TC24064C-NHD controller has RS-232 protocol interface. Communication parameters are: 8 Bit, No Parity and 1 Stop Bit. The TC24064C-NHD controller is shipped set at 9600 baud rate. The baud rate can be changed by a command and stored. A 10 pin IDC connector on board allows communication with PC through the 9-pin DB connector. TVI Electronics ships the adapter cable with each TC24064C-NHD controller. Footprints for optional RS232 connectors are available at J10 and J4. A serial TTL interface is supplied at J7.

1.2.2. *USB communication interface*

The TC24064C-NHD controller has USB protocol interface at J14. TVI Electronics ships the Mini USB cable with each TC24064C-NHD controller.

1.2.3. *4Mb flash memory*

4M bites of Flash Memory are divided into 2048 pages of 256 bytes each. The lower 40 pages of this memory contain text fonts used to display text. The remaining memory can be used to store up to 250 full-screen images. A utility program allows converting and downloading bmp and jpg images with 240x64 pixels resolution to display.

1.2.4. *Touch screen controller*

The touch screen controller can respond by sending X and Y coordinates of touch screen contact location or by sending digits (if used as a 6x3 keypad) to main microprocessor or computer. The TC24064C-NHD controller can produce a sound on touch. In 6x3 Keypad Mode, the screen is divided on 18 boxes 37x18 pixels each. Controller sends digits from 1 to 18 according to the touch location. Each box response can be disabled or enabled. 6x3 Keypad Mode provides a Flip option which reverses colors of the touched box. The TC24064C-NHD controller provides a touch screen calibration routine for more accurate results.

1.2.5. *AVRISP interface*

AVRISP (In-System Programmer) interface allows user to program own code into microcontroller, AVRISP device is required.

1.2.6. Draw/Clear Line/Rectangle/Circle

The TC24064C-NHD controller simplifies drawing and clearing of horizontal, vertical and skew lines and shapes, such as rectangle and circle.

1.2.7. Voltage regulator

The TC24064C-NHD has a built-in voltage regulator with input 5 - 15 VDC (connectors J13(A), J9) and output 3.3 VDC (connector J12). The voltage regulator is capable to provide up to 1A current for external applications. 3.3V power may be applied to J12 eliminating the need for an onboard voltage regulator.

1.2.8. Multiple display modes

The TC24064C-NHD controller supports multiple display modes (Normal, Reverse, Mixed) that can be freely mixed on NHD-C24064WO-ATFH#-3V3 LCDs.

1.2.9. Software control

Software allows controlling LCD contrast, backlight ON/OFF and display ON/OFF.

1.2.10. Hardware contrast adjustment

The TC24064C-NHD controller has a trimmer potentiometer (R11) for contrast adjustment. If you are not satisfied with the default contrast settings, use R11 to adjust the settings.

1.2.11. Buzzer

The TC24064C-NHD controller has a built-in buzzer for sound producing.

1.2.12. Animation

The TC24064C-NHD controller allows auto alternation of images previously stored in a Flash.

1.2.13. Fonts

The TC24064C-NHD controller supports 4 built in font sizes: 7 pixels (H), 14 pixels (H), 14 pixels (H) Bold and 22 pixels (H). The bmp font files are stored as screens 1-5 in controller's memory. Different font sizes can be freely mixed on the screen.

1.2.14. Firmware update

The TC24064C-NHD controller's firmware can be updated through the serial port.

1.3. POWER REQUIREMENTS

Power to the TC24064C-NHD is derived from the external power source through J13(A), J9 or J14 connectors. Voltage of 5 VDC can be supplied through J14. Voltages of 5 VDC to 15 VDC must be supplied through J13(A) or J9 (optional) connectors. Since it is regulated on the TC24064C-NHD, this input voltage does not need to be regulated as long as it falls within this range. Voltage of 3.3 VDC regulated can be supplied through J12.



Make sure the polarity is correct. Reversed power will damage the device and/or power supply and void the warranty.

Do not install jumper 3 on J5 if using voltage supply from J13(A) or J9 connectors. Doing so will permanently damage the controller board and void the warranty.

2. GETTING STARTED

This chapter guides you through the hardware connection, powering up the TC24064C-NHD controller and setting up the software for initial testing.

2.1. HARDWARE CONNECTION

The controller mounts directly to the back of the display utilizing the four latches on the corners of the display. When handling the display and controller make sure to follow the static precautions.

With the display face down and the two data connectors facing away from you route the backlight cable, so it exits the lower right side of the display.

Figure 2-1: LCD Backlight Cable Routing




Carefully align the two plastic pins on the display to the controller board and snap the board in place. Make sure the backlight wires are lined up with the slot in the controller or the board will not seat properly.

Carefully open the two LCD connector latches J2 and J3 by pulling the brown latches outwards. Insert the flat data cables into the connectors being sure the cables are fully seated. After seating the cable push the latches back in being sure both ends are pushed all the way in. Insert the backlight cable into connector J6.

If you have a touch screen carefully pull the latch on connector J11 out. Insert the touch screen cable into J11 being sure it is seated, push the latch back in.


Figure 2-2: Hardware Connection

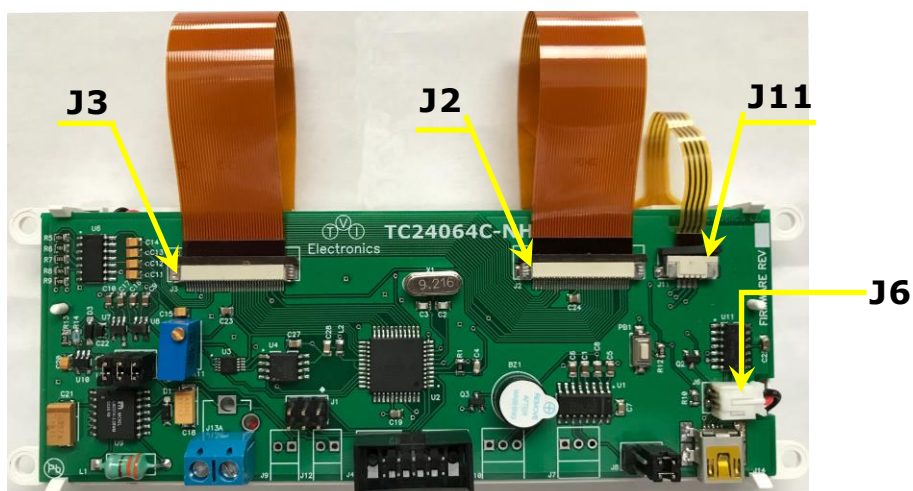

2.2. POWER-UP

Connect a power supply to J13(A) terminal (make sure the polarity is correct) or USB cable to J14 connector; check the jumper's settings. Screen #6 is the power up screen that will be displayed each time the unit is powered up. The power up screen can be customized through Control Panel 240x64 software. The factory default will show TVI Electronics logo and current controller firmware revision as shown on Default Power-Up Screen below.


Example 2-1: Default Power-Up Screen

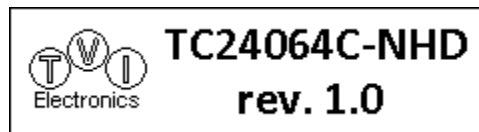

2.3. QUICK START

Download and install Control Panel 240x64 software on your PC. Follow instructions that the installer gives you. When installation is complete, connect a serial cable from your PC to the TC24064C-NHD controller. Once this connection is made, launch the Control Panel 240x64 software on your PC. Select the appropriate COM Port, Baud Rate (default 9600), and click Connect. Now you may begin using the software to evaluate the TC24064C-NHD controller board.

Figure 2-3: Default Software Screen

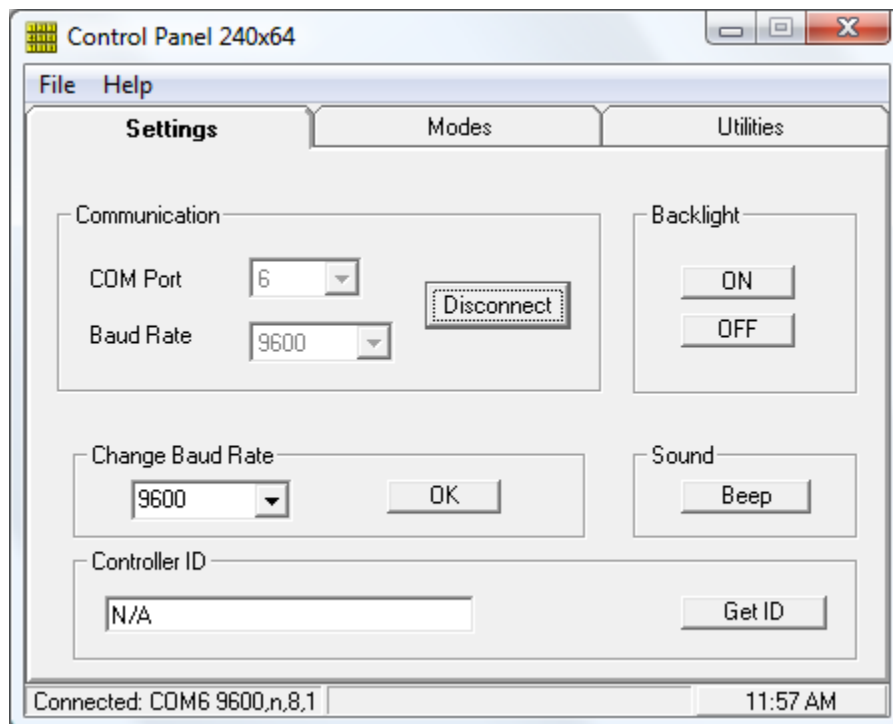

3. OPERATION

This chapter describes each function of TC24064C-NHD controller.

3.1. TC24064C-NHD CONTROLLER CONNECTION

Figure 3-1: TC24064C-NHD Controller Board Layout

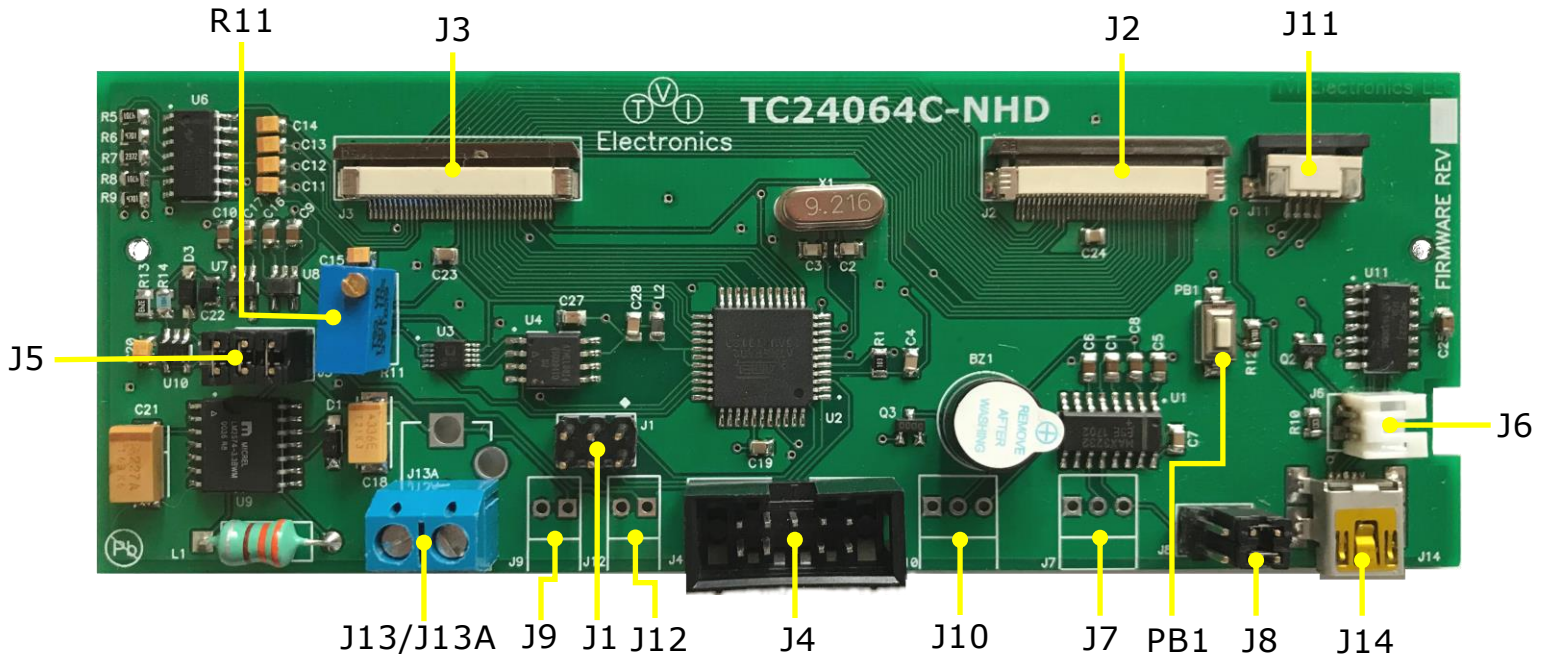


Figure 3-2: J5 Jumpers

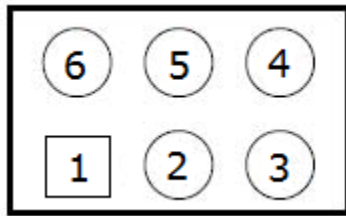


Figure 3-3: J8 Jumpers

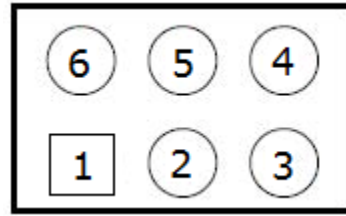


Figure 3-4: J13 Pin Out

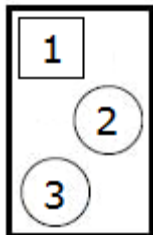


Figure 3-5: J13A Pin Out





Figure 3-6: J9 Pin Out



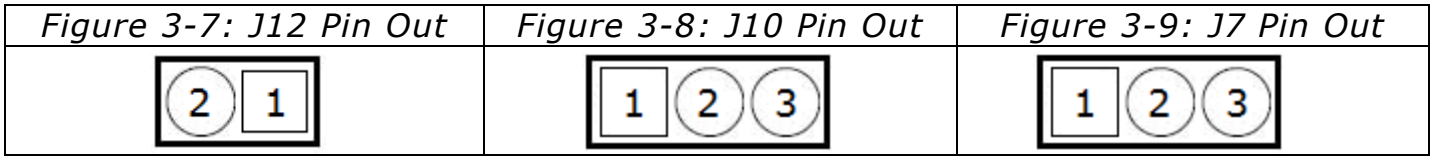


Table 3-1: J5 Jumper Descriptions

PIN #	Function	Subsection
1,6	Default Baud Rate 9600	3.1.1
2,5	Power through J13/J13A or J9	
3,4	Power through J14	

Table 3-2: J8 Jumper Descriptions

PIN #	Function	Subsection
1,2	RS232 Communication J4	3.1.2
6,5		
2,3	USB Communication J14	3.1.3
5,4		

Table 3-3: Headers

Reference Designator	Function
J1	AVRISP Interface
J4	RS232 Interface

Table 3-4: Connectors

Reference Designator	Function
J2, J3	LCD Interface
J6	LCD Backlight Connector
J7	Optional Serial TTL Interface
J13, J13A, J9	5 – 15 VDC Input
J10	Optional RS232 Connector
J11	Touch Screen Connector
J12	Optional 3.3VDC Input / Output
J14	USB Connector

Table 3-5: Switches

Reference Designator	Function	Subsection
PB1	Programming	3.1.6

Table 3-6: J7 Pin Descriptions

PIN Name	PIN #	Type	Description
RxD	1	DIN	UART Receiver Input. This pin should be connected to the host UART TxD.
TxD	2	DOUT	UART Transmitter Output. This pin should be connected to the host UART RxD.
GND	3	PWR	Power Ground

Table 3-7: J13A Pin Descriptions

PIN Name	PIN #	Type	Tolerance	Description
VCC	1	PWR	5-15V	+5-15V Power Input
NC	2	-	-	Not connected. Leave open.
GND	3	PWR	0V	Power Ground

Table 3-8: J13, J9 Pin Descriptions

PIN Name	PIN #	Type	Tolerance	Description
VCC	1	PWR	5-15V	+5-15V Power Input
GND	2	PWR	0V	Power Ground

Table 3-9: J12 Pin Descriptions

PIN Name	PIN #	Type	Tolerance	Description
VCC	1	PWR	3.3V	3.3V Power Input
GND	2	PWR	0V	Power Ground

3.1.1. Jumpers Settings

Jumper between Pins 1 & 6 will force TC24064C-NHD controller to the default (9600) baud rate.

Jumper between Pins 2 & 5 will supply unregulated voltage to the built-in voltage regulator on TC24064C-NHD controller. Use J13/J13A or J9 to supply power to the voltage regulator.



To use USB power, install jumpers on Pins 3 & 4.




DO NOT install jumper on Pins 3 & 4 if using other than USB power source. Doing so will permanently damage the controller board and void the warranty.

3.1.2. Serial Communication

Communication with TC24064C-NHD controller through RS232 requires DB9MF serial cable and DB-9 to 10 Pin IDC adapter.

Figure 3-10: PC to TC24064C-NHD Controller Connection

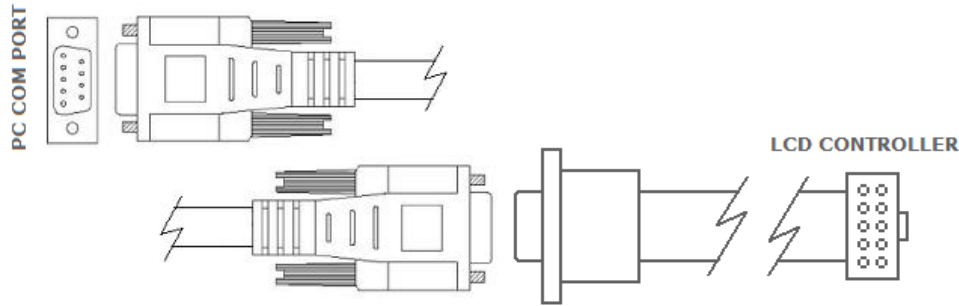

3.1.3. USB Communication

Communication with TC24064C-NHD controller through USB requires USB cable.



USB driver for MCP2221 is available at

<http://www.microchip.com/wwwproducts/Devices.aspx?product=MCP2221>.

3.1.4. Baud Rate Settings

The TC24064C-NHD controller has nine programmable baud rates. The TC24064C-NHD controller is shipped set at 9600 baud rate. A baud rate is set by a command and stored. The baud rate can be changed at any time by removing jumper from Pins 1 & 6 on J5.

3.1.5. Contrast Regulation

The TC24064C-NHD controller provides 8-bit fine contrast adjustment and rough adjustment through R11 trimmer potentiometer. The values provided in the TC24064C-NHD controller should work in most cases, but it is possible that your particular design requires a different combination of fine or rough contrast adjustments.

3.1.6. Firmware Update

TC24064C-NHD controller supports firmware updates. The utility for firmware update is included with the product, which also can be downloaded from <http://www.tvielectronics.com>. The new firmware for the TC24064C-NHD controller can be downloaded at <http://www.tvielectronics.com>.

To enter the programming mode:

1. Turn off the TC24064C-NHD controller board.
2. Press PB1 button on TC24064C-NHD controller and apply power.
3. Release the PB1 button.
4. Start the utility to update firmware.



DO NOT power off TC24064C-NHD controller while the firmware update is progressing, this may damage the TC24064C-NHD controller.

3.2. TC24064C-NHD COMMANDS LIST

- Text Mode

Print a single character:

Address								Data (ASCII)							
0	0	0	0	0	0	1	0	x	x	x	x	x	x	x	x

First character is Address 0x02, second - is ASCII Data for a character.

Print a string:

Address								Data (ASCII) or String Terminator							
0	0	1	0	0	1	1	0	x	x	x	x	x	x	x	x

The string starts with Address 0x26 followed by ASCII Data for every character. The max string size is 45 ASCII characters. For a string less than 45 characters, use a string terminator 0x0D.

- Graphic Mode

To operate in Graphic Mode, the controller requires two characters per command.

Address								Data							
0	0	0	0	0	0	1	1	x	x	x	x	x	x	x	x

Address 0x03, Data - 8 bit for a desired graphic pattern

- XY Mode allows control of a single pixel as well as drawing shapes, such as rectangle and circle and horizontal, vertical or skew lines according to the entered coordinates.

In a Pixel mode the controller will rewrite the contents of the display data RAM for a given pixel.

(0,0) is a coordinate at the top left corner of the screen.

(239,63) is a coordinate at the lower right corner of the screen.

Pixel ON/OFF:

Address								Data							
0	0	0	0	1	0	1	0	x	x	x	x	x	x	x	x

X Coordinate								Y Coordinate							
0	x	x	x	x	x	x	x	0	0	x	x	x	x	x	x

Step 1: Address 0x0A, Data - number of coordinates in the string

Step 2: X (from 0 to 239), Y (from 0 to 63) coordinates

If the specified number of coordinates > 1, repeat Step 2.
 For more than 128 (X and Y) coordinates, repeat Steps 1 & 2.

Overwriting the same coordinate will reverse a pixel on the screen (ON/OFF).

To draw a line:

Address								Data							
0	0	0	1	1	1	1	0	0	0	0	0	0	0	0	0
X1 Coordinate Start								Y1 Coordinate Start							
0	x	x	x	x	x	x	x	0	0	x	x	x	x	x	x
X2 Coordinate End								Y2 Coordinate End							
0	x	x	x	x	x	x	x	0	0	x	x	x	x	x	x

Address 0x1E, Data 0x00, Data X1, Data Y1, Data X2, Data Y2
 (X1,Y1) - Start coordinate (X2,Y2) - End coordinate

To clear a line:

Address								Data							
0	0	0	1	1	1	1	1	0	0	0	0	0	0	0	0
X1 Coordinate Start								Y1 Coordinate Start							
0	x	x	x	x	x	x	x	0	0	x	x	x	x	x	x
X2 Coordinate End								Y2 Coordinate End							
0	x	x	x	x	x	x	x	0	0	x	x	x	x	x	x

Address 0x1F, Data 0x00, Data X1, Data Y1, Data X2, Data Y2
 (X1,Y1) - Start coordinate (X2,Y2) - End coordinate

To draw a rectangle:

Address								Data							
0	0	0	1	1	1	1	0	0	0	0	0	0	0	0	1
X1 Coordinate Start								Y1 Coordinate Start							
0	x	x	x	x	x	x	x	0	0	x	x	x	x	x	x
X2 Coordinate End								Y2 Coordinate End							
0	x	x	x	x	x	x	x	0	0	x	x	x	x	x	x

Address 0x1E, Data 0x01, Data X1, Data Y1, Data X2, Data Y2
 (X1,Y1) - upper left corner (X2,Y2) - lower right corner

To clear a rectangle:

Address								Data							
0	0	0	1	1	1	1	1	0	0	0	0	0	0	0	1

X1 Coordinate Start								Y1 Coordinate Start							
0	x	x	x	x	x	x	x	0	0	x	x	x	x	x	x

X2 Coordinate End								Y2 Coordinate End							
0	x	x	x	x	x	x	x	0	0	x	x	x	x	x	x

Address 0x1F, Data 0x01, Data X1, Data Y1, Data X2, Data Y2
 (X1,Y1) - upper left corner (X2,Y2) - lower right corner

To draw a filled rectangle:

Address								Data							
0	0	0	1	1	1	1	0	0	0	0	0	0	0	1	0

X1 Coordinate Start								Y1 Coordinate Start							
0	x	x	x	x	x	x	x	0	0	x	x	x	x	x	x

X2 Coordinate End								Y2 Coordinate End							
0	x	x	x	x	x	x	x	0	0	x	x	x	x	x	x

Address 0x1E, Data 0x02, Data X1, Data Y1, Data X2, Data Y2
 (X1,Y1) - upper left corner (X2,Y2) - lower right corner

To clear a filled rectangle or a specified area:

Address								Data							
0	0	0	1	1	1	1	1	0	0	0	0	0	0	1	0

X1 Coordinate Start								Y1 Coordinate Start							
0	x	x	x	x	x	x	x	0	0	x	x	x	x	x	x

X2 Coordinate End								Y2 Coordinate End							
0	x	x	x	x	x	x	x	0	0	x	x	x	x	x	x

Address 0x1F, Data 0x02, Data X1, Data Y1, Data X2, Data Y2
 (X1,Y1) - upper left corner (X2,Y2) - lower right corner

To reverse pixels of a specified rectangle:

Address								Data							
0	0	0	1	1	1	1	0	0	0	0	0	0	0	1	1

X1 Coordinate Start								Y1 Coordinate Start							
0	x	x	x	x	x	x	x	0	0	x	x	x	x	x	x

X2 Coordinate End								Y2 Coordinate End							
0	x	x	x	x	x	x	x	0	0	x	x	x	x	x	x

Address 0x1E, Data 0x03, Data X1, Data Y1, Data X2, Data Y2
 (X1,Y1) - upper left corner (X2,Y2) - lower right corner

To draw a circle:

Address								Radius							
0	0	1	0	0	0	0	0	x	x	x	x	x	x	x	x

X Coordinate								Y Coordinate							
0	x	x	x	x	x	x	x	0	0	x	x	x	x	x	x

Address 0x20, Data R, Data X, Data Y
 R - circle radius X,Y - circle center point

To clear a circle:

Address								Radius							
0	0	1	0	0	0	0	1	x	x	x	x	x	x	x	x

X Coordinate								Y Coordinate							
0	x	x	x	x	x	x	x	0	0	x	x	x	x	x	x

Address 0x21, Data R, Data X, Data Y
 R - circle radius X,Y - circle center point

- Specify Start page and column

Start page:

Address								Data							
0	0	0	0	0	1	1	0	0	0	0	0	0	x	x	x

Address 0x06, Data x
 x - page address from 0 to 7

Start column:

Address								Data							
0	0	0	1	0	0	1	0	x	x	x	x	x	x	x	x

Address 0x12, Data x
 x - column address from 0 to 239

- Select Screen font:

Address								Data							
0	0	0	1	0	1	0	1	0	0	0	0	0	x	x	x

Address 0x15, Data x
 7 pixels (default): x = 1, 14 pixels: x = 2,
 14 pixels Bold: x = 3, 22 pixels: x = 4

- Backlight:

Address								Data							
0	0	0	0	1	0	0	1	0	0	0	0	0	0	0	x

Address 0x09, Data x
 ON: x = 1, OFF: x = 2

- The touch screen controller can respond by sending X and Y coordinates of a touch screen contact location or by sending digits (if used as 6x3 keypad) to main microprocessor or computer. The TC24064C-NHD controller can produce a sound on touch. In 6x3 Keypad Mode, the screen is divided on 18 boxes 37x18 pixels each. Controller sends digits from 1 to 18 according to the touch location. Each box response can be disabled or enabled. 6x3 Keypad Mode provides a Flip option which reverses colors of the touched box. The TC24064C-NHD controller provides a touch screen calibration routine for more accurate results. The controller responds with '\$' character on touch screen release.

Touch screen in XY Coordinates Mode (allow 3% inaccuracy):

Address								Data							
0	0	0	0	0	1	0	1	0	0	0	0	0	0	x	x

Address 0x05, Data x
 ON: x = 1, OFF: x = 2

Controller response:

X Coordinate								Comma							
x	x	x	x	x	x	x	x	0	0	1	0	1	1	0	0

Y Coordinate								String Terminator							
y	y	y	y	y	y	y	y	0	0	1	0	0	0	0	0

Example: x 0x2C y 0x20

Keypad Mode:

Address								Data							
0	0	0	1	0	0	1	1	0	0	0	0	0	0	x	x

Address 0x13, Data x
 Keypad without Flip: x = 1, Keypad with Flip: x = 2, OFF: x = 3

Disable Specific Keypad Box. By default all 18 boxes are enabled.

Example 3-1: 6x3 Keypad Configuration

	MSB			LSB		
Row 1	1	2	3	4	5	6
Row 2	7	8	9	10	11	12
Row 3	13	14	15	16	17	18

Address								Data Row 1							
0	0	1	0	0	1	0	1	0	0	x	x	x	x	x	x

Data Row 2								Data Row 3							
0	0	x	x	x	x	x	x	0	0	x	x	x	x	x	x

Address 0x25, Data Row 1, Data Row 2, Data Row 3

Example: To disable Boxes 1, 8, 15

Command: 0x25 0x1F 0x2F 0x37

Example: To re-enable all boxes

Command: 0x25 0x3F 0x3F 0x3F

Touch Screen Calibration:

Address								Data							
0	0	0	1	1	0	0	1	0	0	0	0	0	0	0	1

Address 0x19, Data 1

The calibration routine is provided to compensate for the normal touch screen variation. It is necessary to perform the software calibration of the touch panel after mounting the T/P onto your LCD.

You will be asked to touch three corners of the touch screen. A "Dot" along with comments will appear on the screen indicating where to make a touch. After successful calibration the controller will print "Done!" on the screen.

- Beep / Sound:

Address								Data							
0	0	1	0	0	0	1	1	0	0	0	0	0	0	0	1

Address 0x23, Data 0x01

The beep length is approximately ½ sec.

Beep on Touch:

Address								Data							
0	0	1	0	0	0	1	1	0	0	0	0	0	0	x	x

Address 0x23, Data x

Enable: x = 2, Disable: x = 3

- Display power save mode:

Address								Data							
0	0	0	0	1	1	0	1	0	0	0	0	0	0	x	x

Address 0x0D, Data x

ON: x = 1, OFF: x = 2

- Display background color

The TC24064C-NHD controller supports multiple display modes (Normal, Reverse, Mixed) that can be freely mixed on NHD-C24064WO-ATFH#-3V3 LCD. Normal and Reverse Modes commands allow pixel ON/OFF state to be reversed without having to rewrite the contents of the display data RAM. Mixed Mode commands will rewrite the contents of the display data RAM. In order to clear the data RAM use a Clear Screen command.

Address							Data								
0	0	0	0	1	0	1	1	0	0	0	0	0	x	x	x

Address 0x0B, Data x

Normal: x = 0, Reverse: x = 1

Top (4 pages) Normal Bottom (4 pages) Reverse: x = 2

Top Reverse Bottom Normal: x = 3

Right (120 columns) Reverse Left (120 columns) Normal: x = 4

Diagonal from Top Right to Bottom Left: x = 5

Diagonal from Top Left to Bottom Right: x = 6

- Flip Page (Highlight):

Address							Data								
0	0	0	1	1	1	0	1	0	0	0	0	0	x	x	x

Address 0x1D, Data x

x - page number from 0 to 7

- Clear screen

The Clear Screen command allows clearing of a single page or a whole screen.

Address							Data								
0	0	0	0	0	0	0	1	0	0	0	0	x	x	x	x

Address 0x01, Data x

x - page number from 0 to 7

x = 8 - whole screen

- Contrast

The TC24064C-NHD controller provides 8-bits of software contrast adjustment. The contrast value is stored and will default to the stored value.

Address							Data								
0	0	0	1	0	0	0	0	x	x	x	x	x	x	x	x

Address 0x10, Data x

x - from 0 to 255

- Animation

The TC24064C-NHD controller allows automatic alternation of images previously stored in Flash. Any command sent to the controller while animation is running will stop the animation and clear the screen.

Address								Delay							
0	0	0	1	1	0	1	1	x	x	x	x	x	x	x	x

Start Screen								Stop Screen							
x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x

Address 0x1B, Delay - from 3 to 255 (each unit represents 100ms)
 Start Screen - from 1 to 254
 Stop Screen - from 2 to 255

- Set baud rate

The baud rate value is stored and will default to the stored value.

Address								Data							
0	0	0	0	1	1	1	1	0	0	0	0	x	x	x	x

Address 0x0F, Data x
 2400bps: x = 0, 4800bps: x = 1, 9600bps: x = 2, 14400bps: x = 3,
 19200bps: x = 4, 28800bps: x = 5, 38400bps: x = 6, 57600bps: x = 7,
 76800bps: x = 8, 115200bps: x = 9

- 4M bites of Flash Memory are divided into 2048 pages of 256 bytes each. The lower 40 pages of this memory contain text fonts used to display text. The remaining memory can be used to store up to 250 full-screen images. A utility program allows converting and downloading bmp and jpg images with 240x64 pixels resolution to display.

Load screen from Flash:

Address								Data							
0	0	0	0	1	0	0	0	x	x	x	x	x	x	x	x

Address 0x08, x - from 6 to 255

Save current screen:

Address								Data							
0	0	0	1	0	0	0	1	x	x	x	x	x	x	x	x

Address 0x11, x - from 6 to 255

- Controller ID

The TC24064C-NHD controller provides controller ID and firmware revision in the form of a string.

Address								Data							
0	0	1	0	1	0	0	0	x	x	x	x	x	x	x	x

Address 0x28, x – don't care
String Example: "TC24064C-NHD 1.3"



The controller will respond with exclamation mark (!) 0x21 when ready for the next command.

4. PHYSICAL DESCRIPTION

This chapter contains the TC24064C-NHD controller board's physical dimensions.

4.1. TC24064C-NHD CONTROLLER BOARD PHYSICAL DIMENSIONS

- 134.9 mm (W) x 49.5 mm (H) x 23.3* mm (D) max
* With DB-9 to 10 pin IDC adapter cable